


● Button function

- ① Button '+': Shortly pressed->Next song. Long pressed->Volume increase.
- ② Button '-': Shortly pressed->Switch playing mode (Voice record or MP3), Long pressed->Volume decrease.
- ③ ON/OFF
- ④ USB/Charge/Earphone connector
- ⑤ Indicator light

Attention: The screen is for decorate, not a real screen.

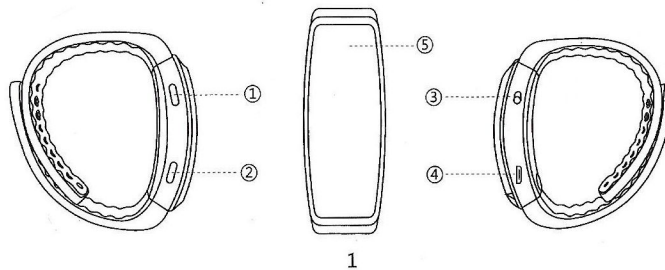

● ON/OFF

ON: Power on.

OFF: Power off.

● Record/Saved

Record: When the button switched to the ON position, the indicator light will on and flash 3 times, and then off. And recording begins.

Saved: When the button switched to the OFF position, the indicator light will flash one time and then off, and the record will be saved.

● Playing Mode

Plugged with headphone and power on, it will enter the playing mode. And shortly press the '-' button to switch the MP3 and the voice record playing.

Attention: With earphone plugged, it's the playing mode. Without earphone plugged it's the recording mode.

2

● Next song

On the playing mode, press '+' and it will play the next file.

● Volume +/-

On the playing mode, long press '+' to increase volume. And long pressing '-' to decrease volume.

● Power Charge

Switch to OFF, and plug cable to connect the voice recorder with power adapter or computer. Then the indicator will continuously flash. When power full, need about 1 hours, the indicator light will off.

● Connect with PC

Switch to OFF

Plug cable and connect with PC, the Removable Disk will show up.

Attention: In order to avoid the recording losing the recorder, please remember backup the files.

3

● The Low-Noise Recording Mode

Switch to on, and press '+' until the red light off, and it change to the Low-Noise Recording Mode.

● The Voice Operated Switch mode

Switch to on, and press '-' until the red light off, it will record when there is the voice and stand by when no voice.

● Delete files

Plugged with headphones, when playing the file, press '+' and '-' at the same time, it will enter the mode of deleting file, and the purple light will flash, and long press '+' or '-', then the file will be deleted with the blue light flash quick. When in the mode of deleting file, press '+' and '-' at the same time, all the files will be deleted with the red light quick flash.

● Fast Forward and Rewind Function

Switch to ON first, then plug in the headphone, long press '+' or '-' until the blue light flash or blue and purple light flash alternately, then release the button, the Fast Forward and Rewind Function will work. Long pressing '+' -> fast forward, Long pressing '-' -> fast rewind.

4

● Recording while charging

Switch to ON when the voice recorder is being charged, and long press '+' or '-' until the light off, it will record while being charged.

● Recording and Listening

Switch to ON, long press '+' or '-' until the red light off, and you can plug in the headphone. It will record and can listen at the same time.

● Recording Check

When recording, long press '+' or '-', the red flash one time. That shows the recorder is on work.

● Factory Reset

Switch to OFF->Connect with the PC->Right click the removable Disk->Format
Note: Do remember to back up the important file before reset.

5

● Parameter Details

Battery: Rechargeable lithium battery
Recording Format: WAV
Music Format: MP3/WMA/WAV
Audio Sampling Rate:48KHZ
Kbps:192 Kbps
Maximum Continuous Recording time: about 20 hours
Maximum Playing time: about 15 hours
Charging time: about 1hour
Internal Memory:8 GB

6